

## Kinze EdgeVac Large Cell Disc- Wheat

Variable Transmission

**Cells Per Disc: 60** 

## Meter Vacuum Setting: 6-8 (inches of water)

Bulk Fill tank settings: 8-10 (inches of water)

## NOTE: "Reference Population" is used only to set rates and will not match the measured planter monitor population

Monitor will adjust meter RPM for row spacing				Monitor will adjust meter RPM for row spacing			
*Reference Population	Application Rate (lbs/acre)	*Reference Population	Application Rate (lbs/acre)	*Reference Population	Application Rate (lbs/acre)	*Reference Population	Application Rate (lbs/acre)
145,000	120.5	111,250	92.5	77,500	64.4	43,750	36.4
142,750	118.7	109,000	90.6	75,250	62.6	41,500	34.5
140,500	116.8	106,750	88.7	73,000	60.7	39,250	32.6
138,250	114.9	104,500	86.9	70,750	58.8	37,000	30.8
136,000	113.1	102,250	85.0	68,500	56.9	34,750	28.9
133,750	111.2	100,000	83.1	66,250	55.1	32,500	27.0
131,500	109.3	97,750	81.3	64,000	53.2	30,250	25.1
129,250	107.4	95,500	79.4	61,750	51.3	28,000	23.3
127,000	105.6	93,250	77.5	59,500	49.5	25,750	21.4
124,750	103.7	91,000	75.6	57,250	47.6	23,500	19.5
122,500	101.8	88,750	73.8	55,000	45.7	21,250	17.7
120,250	100.0	86,500	71.9	52,750	43.8	19,000	15.8
118,000	98.1	84,250	70.0	50,500	42.0	16,750	13.9
115,750	96.2	82,000	68.2	48,250	40.1	14,500	12.1
113,500	94.3	79,750	66.3	46,000	38.2	12,250	10.2

Note: Seeding rates are approximations, environmental conditions can affect planting rates; Always field check populations.

