

Precision Planting – Wheat

Variable Transmission

Meter Vacuum Setting: 6-8 (inches of water)

Bulk Fill tank Settings: 8-10 (inches of water)

Cells Per Disc: 12

NOTE: "Reference Population" is used only to set rates and will not match the measured planter monitor population

Monitor will adjust meter RPM for row spacing				
*Reference Population	Application Rate (lbs/acre)	*Reference Population	Application Rate (lbs/acre)	
125,000	166.0	95,750	127.1	
122,750	163.0	93,500	124.1	
120,500	160.0	91,250	121.2	
118,250	157.0	89,000	118.2	
116,000	154.0	86,750	115.2	
113,750	151.0	84,500	112.2	
111,500	148.0	82,250	109.2	
109,250	145.1	80,000	106.2	
107,000	142.1	77,750	103.2	
104,750	139.1	75,500	100.2	
102,500	136.1	73,250	97.3	
100,250	133.1	71,000	94.3	
98,000	130.1	68,750	91.3	

Monitor will adjust meter RPM for row spacing				
*Reference Population	Application Rate (lbs/acre)	*Reference Population	Application Rate (lbs/acre)	
66,500	88.3	37,250	49.5	
64,250	85.3	35,000	46.5	
62,000	82.3	32,750	43.5	
59,750	79.3	30,500	40.5	
57,500	76.3	28,250	37.5	
55,250	73.4	26,000	34.5	
53,000	70.4	23,750	31.5	
50,750	67.4	21,500	28.5	
48,500	64.4	19,250	25.6	
46,250	61.4	17,000	22.6	
44,000	58.4	14,750	19.6	
41,750	55.4	12,500	16.6	
39,500	52.4	10,250	13.6	

Note: Seeding rates are approximations, environmental conditions can affect planting rates; Always field check populations.



Phone: 260-245-5006 Email: info@davaus.com Website: Davaus.com